




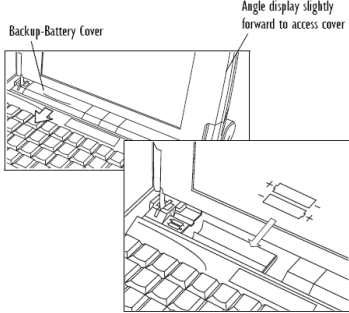


## Changing the back-up batteries in the Polyana 4

 <p>Backup-Battery Cover</p> <p>Angle display slightly forward to access cover</p>	<p>If the Polyana 4 displays a message saying that the back-up batteries are low, and they need to be changed, this is how to change the back-up batteries.</p>
	<p>Open the Polyana 4 lid to reveal the keyboard.</p> <p>Tilt the display forward as if to close the lid so that the area below the screen and above the keyboard is revealed.</p> <p>On the left side there is a lid – it is 3.75 inches wide, extending from the left hinge almost to the middle of the keyboard.</p> <p>There is a small indent as shown in the picture.</p> <p>Press firmly and slide this lid open (towards the keyboard).</p>
	<p>Remove the lid completely to reveal the 2 x AAA batteries</p>
	<p>Remove the old batteries and dispose of them properly.</p> <p>Insert the new batteries in the correct directions for positive and negative as shown under the left side of the battery cover.</p> <p>Replace the lid carefully but completely so that it clicks into place.</p>